

software download address:

http://kohoxo.com/en-piano.zip

1	8.8.8.	LED display	15	Insert	Insert bu
2	Dual Voice	Dual Voicebutton	16	•	Play bu
3	Sustain	Sustain button	17	►II	Start/Stop
4	0	Power indicator	18	Tempo	Tempo b
5	Syncho	Syncho button	19	Dynamics	Dynamic
6	Δ	Metronome button	20	RHY	Rhythm I
7	Demo	Demo button	21	+	Increase selec
8	Trans	Trans button	22	Tone	Tone bu
9	Vol	Volume button	23	Ô	Earphone/Spea
10	_	Decrease selection button	24	MP3	Mp3 input ir
11	Dual Keyboard	Dual keyboard button	25	ð	Sustain ped
12	Full Fingered	full fingered button	26	USB/DC 5V	USB inte
13	0	Charging indicator	27	ON/OFF	POWER (
14	REC	Record button			
N/C Pressone Vith ele ressone Volu Pressore The Rhy	s "On" to ope  129 tones ct the tone s "\$" or "\$" her function me ss the "volume en will disp	when opening, the initial numbers select the tone. Press "A" on selection modes press the teme" button, repress "A" or ">"to lay the corresponding level not per is 12 when opening, the high	or "、 one o inc umb	vover one button can crease or dependent.	second,can sele return the tone s

8.8.8.	LED display	15	Insert	Insert button
al Voice	Dual Voicebutton	16	<b>&gt;</b>	Play button
ustain	Sustain button	17	►II	Start/Stop button
0	Power indicator	18	Tempo	Tempo button
Syncho	Syncho button	19	Dynamics	Dynamics button
Δ	Metronome button	20	RHY	Rhythm button
Demo	Demo button	21	+	Increase selection but
Trans	Trans button	22	Tone	Tone button
Vol	Volume button	23	Ô	Earphone/Speaker inte
-	Decrease selection button	24	MP3	Mp3 input interface
Dual eyboard	Dual keyboard button	25	ð	Sustain pedal interf
Full ingered	full fingered button	26	USB/DC 5V ON/OFF	USB interface
0	Charging indicator	27	ON/OFF	POWER ON/OFF
REC	Record button			
n descr	iption			
n" to ope	en, press "OFF" to close			
9 tones				
	when opening,the initial numb to select the tone.Press "仌" o			
	n selection modes press the to			
ae "volui	me"button,repress "☆"or"▽"to	n inc	rease or de	acrease to sound the dia
will disp	lay the corresponding level n	umb	er.	corease (o sound, the dig
ial numb ı	per is 12 when opening,the hig	ghes	st is 15.	
8 rhythm		_		
	top"or Rhythm",into rhythm p e rhythm.Press"≿"or"∨"to sele			natically,repress "start"
∵or"∨"o	ver one second, can select the			y,will play the correspon
when re Syncho"	ieasing. button,can press the piano bu	ıtton	to start the	rhythm playing.
	utton,can insert the new rhyth			
demos				
emo"bu	tton will play all the demos,pr	ess'	start"or"St"	op"to start or stop playir

	8.8.8.	LED display	15	Insert	Insert button
	Dual Voice	Dual Voicebutton	16	<b>&gt;</b>	Play button
	Sustain	Sustain button	17	►II	Start/Stop butto
	0	Power indicator	18	Tempo	Tempo button
	Syncho	Syncho button	19	Dynamics	Dynamics butto
	Δ	Metronome button	20	RHY	Rhythm button
	Demo	Demo button	21	+	Increase selection bu
	Trans	Trans button	22	Tone	Tone button
	Vol	Volume button	23	Ô	Earphone/Speaker int
	1	Decrease selection button	24	MP3	Mp3 input interfac
	Dual Keyboard	Dual keyboard button	25	ð	Sustain pedal inter
	Full Fingered	full fingered button	26	USB/DC 5V	USB interface
	0	Charging indicator	27	ON/OFF	POWER ON/OF
	REC	Record button			
)		iption en, press "OFF" to close			
t	129 tones ct the tone v s "☆" or "✔" her function me	when opening, the initial numb to select the tone.Press "众" on n selection modes press the to	or "√ one	over one button can	second,can select the return the tone selection
,	en will disp initial numb thm 128 rhythm		umb ghes	er. st is 15.	·
3	playing the	top"or Rhythm",into rhythm p e rhythm.Press"☆"or"▽"to sele ver one second,can select the leasing.	ct th	ie rhythm.	

, ,			ı	Ţ	
	LED display	15	Insert	Insert button	
ice	Dual Voicebutton	16	<b>&gt;</b>	Play button	pitch of the keys,different chord styles at different rhythms.Finger (major triads chord and
1	Sustain button	17	►II	Start/Stop button	triads chord),single only have major triads chord. In the chord mode, press the "full fingered off the chord.
	Power indicator	18	Tempo	Tempo button	8 Record function
10	Syncho button	19	Dynamics	Dynamics button	<ul> <li>Press"record"button into record mode, digital screen displays REC</li> <li>The recording function is taken a multi-channel real-time recording method to reco</li> </ul>
	Metronome button	20	RHY	Rhythm button	Into record mode, user can press the keyboard freely, the system will automatically in
	Demo button	21	+	Increase selection button	keys played by the user. When it is full, digital screen displays "full" to remind. • Press "Play" to play the recording notes, must have notes recorded, this function is a
;	Trans button	22	Tone	Tone button	valid.It will return to the original state automatically when finishing.
	Volume button	23	ô	Earphone/Speaker interface	<ul> <li>Can select the tone during playing, the record notes will refresh automatically when and reset.</li> </ul>
	Decrease selection button	24	MP3	Mp3 input interface	<ul> <li>You can close the metronome sound through start/stop button according your needing who</li> </ul>
ırd	Dual keyboard button	25	ð	Sustain pedal interface	9 Trans function • Total 13 levels: -6、-5、-4、-3、-2、-1、0、1、2、3、4、5、6
	full fingered button	26	USB/DC 5V	USB interface	<ul><li>Playing mode,press"Trans"button into trans function,through"☆"or" ∨ "trans</li></ul>
ed	Charging indicator	27	ON/OFF	POWER ON/OFF	10 Adjust the playing speed • Playing mode,press"Tempo"into playing adjust function,through "☆"or" ∨ "button to
	Record button			FOWER ON/OTT	playing speed.
					11 USB-MIDI-IN-OUT function Connect the computer or table through USB cable to work
scri	iption				12 Metronome function
оре	en, press "OFF" to close				.Metronome assist function,press the " ¼ " can select the metronome cyclically,will be 4 chai it is:b01(2/4 beat),b02(3/4 beat),b03(4/4 beat),b04(1/4 beat).
nes					13 Drum kit function
ne v	when opening,the initial numl	beri	s:000,the c	digital screen displays "000"	Select the 128th tone for drum tone  14 Sustain function
				second, can select the tone qu	Press"Sustain" button to turn on or turn off sustain function
tior	n selection modes press the t	one	button can	return the tone selection mod	15 Pedal sustain function
alur	me"button,repress "☆"or"▽"t	o in	rrease or d	ecrease to sound the digital	•Step sustain pedal has sustain effect
	lay the corresponding level n			coreage (o godina, tire digital	16 Sleeping function
	per is 12 when opening,the hi				During using, no any action minutes , the LED and power light will off, into sleeping n
th m					automatically,press any keys to wake up. 17 LED Indicator
thm "S		lav	mode autor	matically,repress "start" or "sto	Red LED indicator.  Red LED indicator for charging light, when the built-in lithium battery is not fully charged, plu
	e rhythm.Press"≿"or"√"to sele			maneany, repress start or ste	USB 5V cable for charging, red LED indicator is on, when full
				ly,will play the corresponding	18 .Dual voice function:
	leasing.				Press "+" or "-" to select the favorite tone (the first tone) when opening,then press "Dual voice"but
	button,can press the piano bu itton,can insert the new rhyth				to open this function, the LED will display ON, and re-press "+" or "-"to select the second favorite
ı DU	ittori, can insert the new myth	111111	เเบ เทษ มสรา	Striyumii.	now,the mixed sound of two selected two tones.Re-press this button,turn off this function,and the
os					will display OFF.(Remark:Will not retain the previously selected tone when turn off)
, ,					

LED display	15	Insert	Insert button	
Dual Voicebutton	16	<b>&gt;</b>	Play button	pitch of the keys,different chord styles at different rhythms.Finger (major triads chord and minor
Sustain button	17	►II	Start/Stop button	triads chord), single only have major triads chord. In the chord mode, press the "full fingered" to ture off the chord.
Power indicator	18	Tempo	Tempo button	8 Record function
Syncho button	19	Dynamics	Dynamics button	<ul> <li>Press"record"button into record mode, digital screen displays REC</li> <li>The recording function is taken a multi-channel real-time recording method to record not</li> </ul>
Metronome button	20	RHY	Rhythm button	•Into record mode, user can press the keyboard freely, the system will automatically record
Demo button	21	+	Increase selection button	keys played by the user. When it is full, digital screen displays "full" to remind.  • Press "Play" to play the recording notes, must have notes recorded, this function is considered.
Trans button	22	Tone	Tone button	valid. It will return to the original state automatically when finishing.
Volume button	23	ô	Earphone/Speaker interface	<ul> <li>Can select the tone during playing, the record notes will refresh automatically when re-re and reset.</li> </ul>
Decrease selection button	24	MP3	Mp3 input interface	You can close the metronome sound through start/stop button according your needing when rec     Trans function
Dual keyboard button	25	-	Sustain pedal interface	• Total 13 levels: -6、-5、-4、-3、-2、-1、0、1、2、3、4、5、6
full fingered button	26	USB/DC 5V	USB interface	<ul> <li>•Playing mode,press"Trans"button into trans function,through"☆"or" ∨ "trans</li> <li>10 Adjust the playing speed</li> </ul>
Charging indicator	27	ON/OFF	POWER ON/OFF	Playing mode,press"Tempo"into playing adjust function,through "☆ "or" ➤ "button to conti playing speed.
Record button				11 USB-MIDI-IN-OUT function
ion				Connect the computer or table through USB cable to work
press "OFF" to close				12 Metronome function  .Metronome assist function, press the "\( \bar{\Lambda}\) " can select the metronome cyclically, will be 4 changes, it is:b01(2/4 beat),b02(3/4 beat),b03(4/4 beat),b04(1/4 beat).
				13 Drum kit function
en opening,the initial numl	oer i	s:000,the c	digital screen displays "000"	Select the 128th tone for drum tone
select the tone.Press "☆"	or "、	√"over one	second, can select the tone quic	kly. 14 Sustain function Press"Sustain" button to turn on or turn off sustain function
election modes press the t	one	button can	return the tone selection mode	15 Pedal sustain function
"button.repress "☆"or"▽"t	o ind	crease or d	ecrease to sound, the digital	•Step sustain pedal has sustain effect
the corresponding level n	umb	oer.	<b>.</b>	16 Sleeping function
is 12 when opening,the hi	ghes	st is 15.		During using,no any action minutes ,the LED and power light will off,into sleeping mode automatically,press any keys to wake up.
				17 LED Indicator
nythm.Press"☆"or"▽"to sele	ct th	ne rhythm.	matically,repress "start" or "stop 	<ul> <li>.Red LED indicator for charging light, when the built-in lithium battery is not fully charged, plug in th USB 5V cable for charging, red LED indicator is on, when full</li> </ul>
r one second,can select the Isina.	e rh	ytnm quickl	ly,will play the corresponding	18 .Dual voice function:
tton,can press the piano bu	uttor	n to start the	e rhythm playing.	Press "+" or "-" to select the favorite tone (the first tone) when opening, then press "Dual voice" button

# and minor jered"to turn ally record the

turn off,the LED will display OFF.

# 20.Blue-tooth APP function(Bluetooth 5.0) Search MIDI PIANO to connect by mobile APP .iPhone connection method: Pop piano connection: 1.Scan the QR code to download the Pop piano: urn on the Bluetooth in your phone then open the Pop piano APP, select any song, start ck on the top left of the phone screen w ,select after opening:Bluetooth connection-Next-confirm to connect with the Bluetooth 4.Confirming Bluetooth connection, this icon is blue hen re-record GarageBand connection: g when recordig Open the GarageBand in your phone, if not, please download by yourself; Open the GarageBand, click the setting icon on the top right of the phone screen; 4.Song setting-advanced-Bluetooth device to connect the piano Bluetooth. Perfect Piano connection: 1.To download the perfect piano APP in your phone firstly; Turn on the Bluetooth in your phone; 3. Connecting the GarageBand at first, after connection, then open perfect piano APP to use. Android connection method: Scan the QR code to download the Pop piano: 2.Turn on the Bluetooth in your phone,some phone need to turn on the phone positioning; 3.Open the Pop piano,select any song,start playing after entering; 4.Click on the top left of the phone screen 🕎 ,select after opening:Bluetooth connection-Next-confirm to connect with the Bluetooth; 5.Confirming Bluetooth connection,this icon is blue

.Press the "Dual Keyboard"button,the LED will display "ON",28 keys on the left bass area fixed bass.can

select your favorite tone on 29-88 keys area on the light,re-press "Dual Keyboard" button,this function is

21.Blue-tooth function

blue-tooth audio version)

.After turning on the blue-tooth function automatically turns on and there is a prompt tone. To search "Music-Piano" in your phone to connect there is a prompt tone after the connection is successful. Inc-

rease or decrease the volume or music selection should be made through your phone.(Only suit for

# IV Accessory one: lists of tone

T09 Glockenspiel T44 Tremolo Strings T11 Vibraphone T46 Orchestral Harp T12 Marimba T47 Timpani T13 Xylophone T48 String Ensemble 1 T14 Tubular Bells T49 String Ensemble 2 T15 Dulcimer T50 Synth Strings 1 Hammond Organ T51 Synth Strings 2 T17 Percussive Organ T52 Choir Aahs Rock Organ T53 Voice Oohs T19 Church Organ T54 Synth Voice T20 Reed Organ T55 Orchestra Hit T22 Harmonica T57 Trombone T23 Tango Accordian T58 Tuba T25 Acoustic Guitar (steel) T60 French Horn Electric Guitar (jazz) T61 Brass Section T27 Electric Guitar (clean) T62 Synth Brass 1 T28 Electric Guitar (muted) T63 Synth Brass 2 T29 Overdriven Guitar T64 Soprano Sax T30 Distortion Guitar T65 Alto Sax T31 Guitar Harmonics T66 Tenor Sax T32 Acoustic Bass T67 Baritone Sax
T33 Electric Bass(finger) T68 Oboe

T34 Electric Bass (pick) T69 English Horn

Tone Number	Name	Tone Number	Name
T70	Bassoon	Т99	FX 4 (atmosphere)
T71	Clarinet	T100	FX 5 (brightness)
T72	Piccolo	T101	FX 6 (goblins)
T73	Flute	T102	FX 7 (echoes)
T74	Recorder	T103	FX 8 (sci-fi)
T75	Pan Flute	T104	Sitar
T76	Bottle Blow	T105	Banjo
T77	Shakuhachi	T106	Shamisen
T78	Whistle	T107	Koto
T79	Ocarina	T108	Kalimba
T80	Lead 1 (square)	T109	Bagpipe
T81	Lead 2 (sawtooth)	T110	Fiddle
T82	Lead 3 (caliope lead)	T111	Shanai
T83	Lead 4 (chiff lead)	T112	Tinkle Bell
T84	Lead 5 (charang)	T113	Agogo
T85	Lead 6 (voice)	T114	Steel Drums
T86	Lead 7 (fifths)	T115	Woodblock
T87	Lead 8 (bass+lead)	T116	Taiko Drum
T88	Pad 1 (new age)	T117	Melodic Tom
T89	Pad 2 (warm)	T118	Synth Drum
Т90	Pad 3 (polysynth)	T119	Reverse Cymbal
T91	Pad 4 (choir)	T120	Guitar Fret Noise
T92	Pad 5 (bowed)	T121	Breath Noise
Т93	Pad 6 (metallic)	T122	Seashore
Т94	Pad 7 (halo)	T123	Bird Tweet
T95	Pad 8 (sweep)	T124	Telephone Ring
Т96	FX 1 (rain)	T125	Helicopter
Т97	FX 2 (soundtrack)	T126	Applause
Т98	FX 3 (crystal)	T127	Gunshot
		T128	Drum kit

\_\_\_\_\_\_6 \_\_\_\_\_

Bassoon	T99	FX 4 (atmosphere)		R000	80sPop	R035	American march
Clarinet	T100	FX 5 (brightness)		R001	16Beat pop	R036	March style
Piccolo	T101	FX 6 (goblins)		R002	8Ballad	R037	Tarante
Flute	T102	FX7 (echoes)		R003	8Beat soul	R038	Funk soul
Recorder	T103	FX 8 (sci-fi)		R004	70sRock	R039	Rock waltz
Pan Flute	T104	Sitar		R005	Afro pop	R040	Piano bar
Bottle Blow	T105	Banjo		R006	Rap pop	R041	Jazz waltz1
Shakuhachi	T106	Shamisen		R007	60sSoul	R042	Jazz waltz2
Whistle	T107	Koto		R008	70sSoul	R043	16Beat tune
Ocarina	T108	Kalimba		R009	Funky soul	R044	Poka dance
Lead 1 (square)	T109	Bagpipe		R010	16Beat slide	R045	Waltz
Lead 2 (sawtooth)	T110	Fiddle		R011	The twist	R046	Cha-cha
Lead 3 (caliope lead)	T111	Shanai		R012	British pop	R047	Rumba
Lead 4 (chiff lead)	T112	Tinkle Bell		R013	Hard rock	R048	Rock rap
Lead 5 (charang)	T113	Agogo		R014	Fusion jazz	R049	Bullfight dance
Lead 6 (voice)	T114	Steel Drums		R015	Funk slide	R050	Samba1
Lead 7 (fifths)	T115	Woodblock		R016	Fusion slide	R051	Samba2
Lead 8 (bass+lead)	T116	Taiko Drum		R017	Brisk rock1	R052	Tango1
Pad 1 (new age)	T117	Melodic Tom		R018	Brisk rock2	R053	Tango2
Pad 2 (warm)	T118	Synth Drum		R019	Passionate rock	R054	Fox step
Pad 3 (polysynth)	T119	Reverse Cymbal		R020	Jazz rock	R055	Jazz waltz
Pad 4 (choir)	T120	Guitar Fret Noise		R021	Fast gospel	R056	Argentine Tango
Pad 5 (bowed)	T121	Breath Noise		R022	Poka rock	R057	Italian Tango
Pad 6 (metallic)	T122	Seashore		R023	Rock billie	R058	Bossanoval
Pad 7 (halo)	T123	Bird Tweet		R024	Rock roll	R059	Shuffle1
Pad 8 (sweep)	T124	Telephone Ring		R025	Rock cha-cha	R060	Shuffle2
FX 1 (rain)	T125	Helicopter		R026	Rock classic	R061	House
FX 2 (soundtrack)	T126	Applause		R027	Rock slide	R062	Merengue
FX 3 (crystal)	T127	Gunshot	]	R028	Rock pop	R063	Salsa
	T128	Drum kit		R029	Early boca	R064	Disco Latin
			_	R030	Poca pop	R065	Thailand
				R031	Blues1	R066	Reggae1
				R032	Blues2	R067	Salsa
				R033	Blues3	R068	Indian improvisation
				R034	Popular waltz	R069	Merengue
			1				

V Accessory two:lists of rhythm

11000	603F0P	11000	American march
R001	16Beat pop	R036	March style
R002	8Ballad	R037	Tarante
R003	8Beat soul	R038	Funk soul
R004	70sRock	R039	Rock waltz
R005	Afro pop	R040	Piano bar
R006	Rappop	R041	Jazz waltz1
R007	60sSoul	R042	Jazz waltz2
R008	70sSoul	R043	16Beat tune
R009	Funky soul	R044	Poka dance
R010	16Beat slide	R045	Waltz
R011	The twist	R046	Cha-cha
R012	British pop	R047	Rumba
R013	Hard rock	R048	Rock rap
R014	Fusion jazz	R049	Bullfight dance
R015	Funk slide	R050	Samba1
R016	Fusion slide	R051	Samba2
R017	Brisk rock1	R052	Tango1
R018	Brisk rock2	R053	Tango2
R019	Passionate rock	R054	Fox step
R020	Jazz rock	R055	Jazz waltz
R021	Fast gospel	R056	Argentine Tango
R022	Poka rock	R057	Italian Tango
R023	Rock billie	R058	Bossanoval
R024	Rock roll	R059	Shuffle1
R025	Rock cha-cha	R060	Shuffle2
R026	Rock classic	R061	House
R027	Rock slide	R062	Merengue
R028	Rock pop	R063	Salsa
R029	Early boca	R064	Disco Latin
R030	Poca pop	R065	Thailand
R031	Blues1	R066	Reggae1
R032	Blues2	R067	Salsa
R033	Blues3	R068	Indian improvisation
R034	Popular waltz	R069	Merengue

\_\_\_\_\_\_ 8 \_\_\_\_\_

	R099	Disco foxtrot	]	D00	Jasmine	D15	Sweet honey
	R100	Euro soul	]	D01	Why are the flowers so red	D16	Susanna
-	R101	Disco funk1	1	D02	Butterfly Lovers	D17	Do-Re-Mi
2	R102	Disco funk2	1	D03	Entering a new era	D18	Moon River
	R103	Jazz samba	1	D04	Girl of Alishan	D19	Mary has a little sheep
	R104	Disco Party	1	D05	Qinghai Tibet Plateau	D20	Hotels in the Pacific
	R105	Popular Samba	1	D06	InThePlace PeachBlossom	D21	Crazy 1900
d	R106	Club dance	1	D07	Vox dance remix	D22	Family Restaurant
	R107	Modern blues	1	D08	Liuyang River	D23	Johnny the surfer
	R108	Melancholy Foxtrot	1	D09	Curvy Moon	D24	Sinbad hands
	R109	Mambo	1	D10	Childhood	D25	New paradise
ern	R110	Disco soul	1	D11	Good days	D26	Happy birthday
lk	R111	Disco	1	D12	Go home often	D27	Carmen
5	R112	Cobmo	1	D13	Night of grassland	D28	Short song
	R113	Swing beat	1	D14	Radiant	D29	Jingle bells
рор	R114	Krump	1				
 olk	R115	Band marche1	1				
ads	R116	Band marche2	1				
	R117	Band marche3	1				
			<b>」</b>				

# VI Accessory three:name lists of demo

Jasmine	D12	Sweet honey
Why are the flowers so red	D16	Susanna
Butterfly Lovers	D17	Do-Re-Mi
Entering a new era	D18	Moon River
Girl of Alishan	D19	Mary has a little sheep
Qinghai Tibet Plateau	D20	Hotels in the Pacific
InThePlace PeachBlossom	D21	Crazy 1900
Vox dance remix	D22	Family Restaurant
Liuyang River	D23	Johnny the surfer
Curvy Moon	D24	Sinbad hands
Childhood	D25	New paradise
Good days	D26	Happy birthday
Go home often	D27	Carmen
Night of grassland	D28	Short song
Radiant	D29	Jingle bells
	Why are the flowers so red Butterfly Lovers Entering a new era Girl of Alishan Qinghai Tibet Plateau InThePlace PeachBlossom Vox dance remix Liuyang River Curvy Moon Childhood Good days Go home often Night of grassland	Why are the flowers so red Butterfly Lovers D17 Entering a new era D18 Girl of Alishan D19 Qinghai Tibet Plateau D20 InThePlace PeachBlossom D21 Vox dance remix D22 Liuyang River D23 Curvy Moon D24 Childhood D25 Good days D26 Go home often D27 Night of grassland D28

## VII. The protection of piano: 1.Use the soft and clean towel to clean the piano hould be collected well after using, do not put the piano in the humid and hot place

nput voltage:USB DC5V

88keys 3.61KG

ower by 1100mAh li-ion battery.

\_\_\_\_\_\_ 10 \_\_\_\_\_\_