



BasicKit Robacta Drive CMT TPSi

User information



MIG/MAG robot welding torch

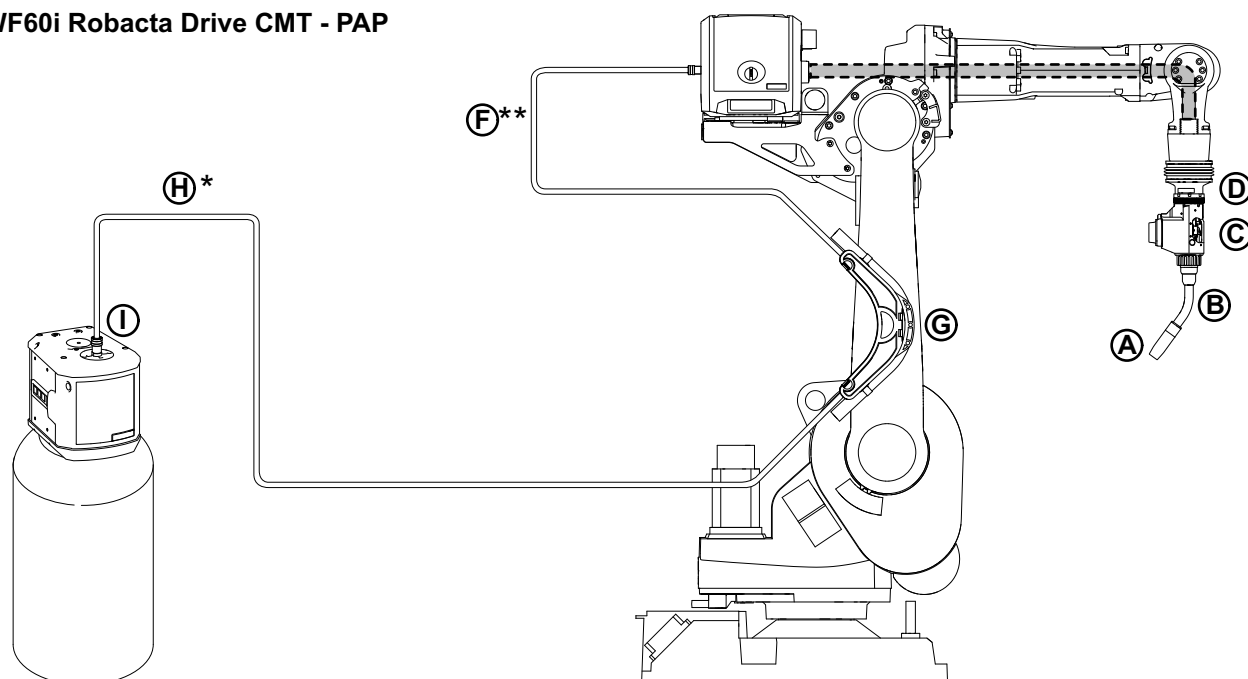


42,0410,2287

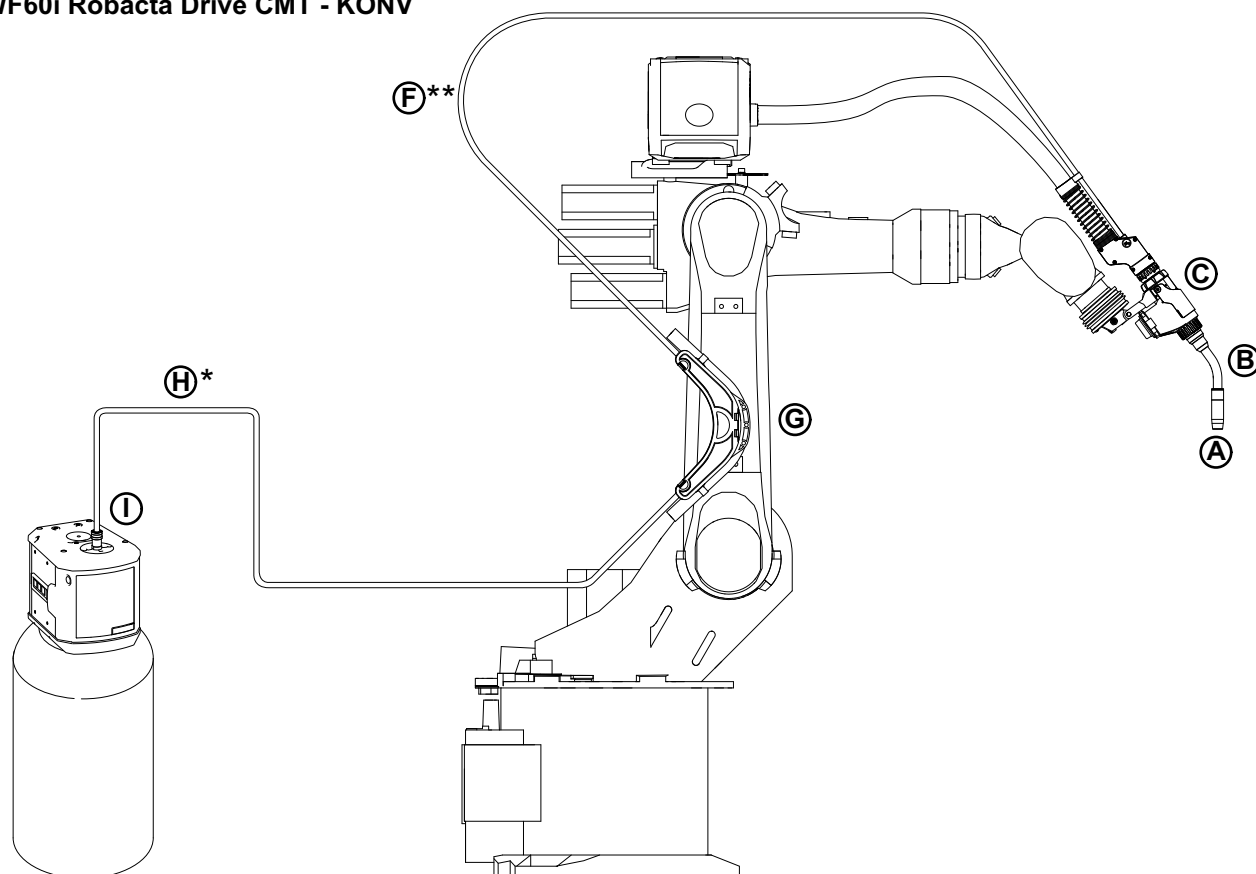
006-13052020

Spare parts list: BasicKit Robacta Drive CMT TPSi

WF60i Robacta Drive CMT - PAP



WF60i Robacta Drive CMT - KONV



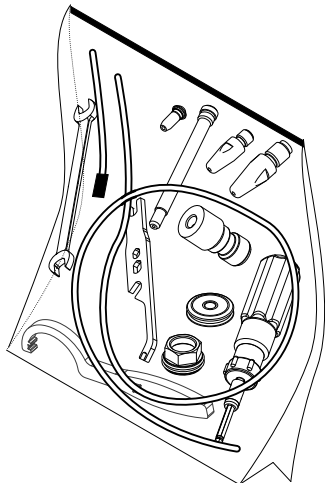
(H)* : max. 6m /

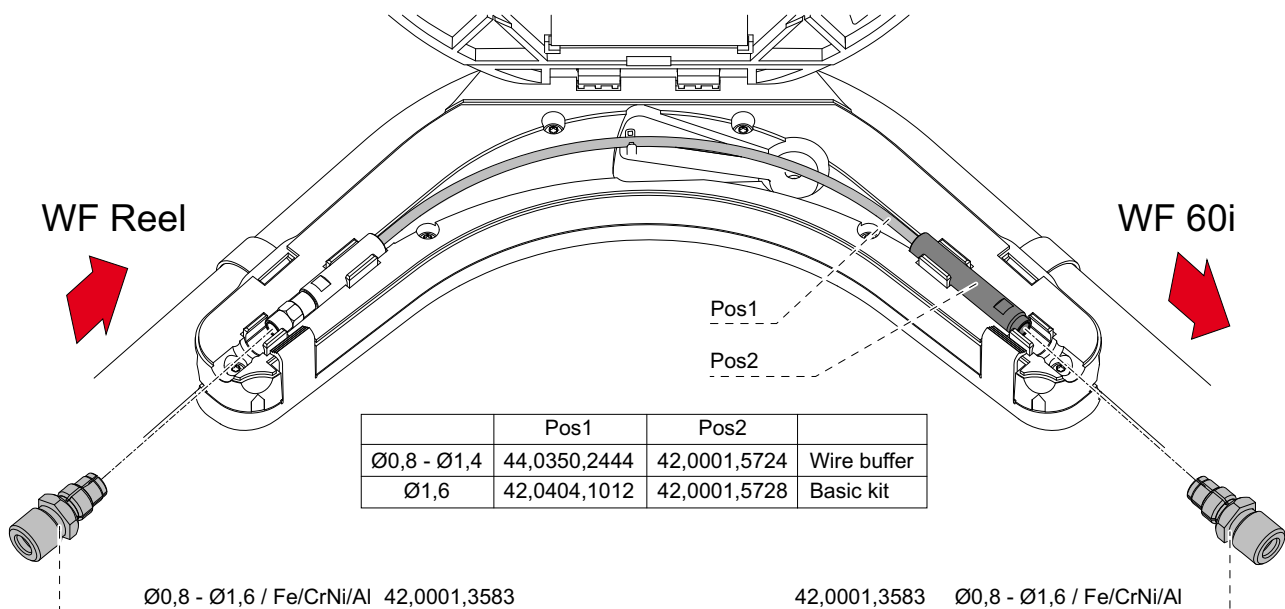
40,0001,0395 wire feed hose ID 5,7mm / OD 9,5mm

(F)** : max. 2m PAP /

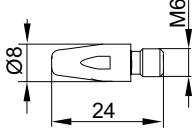
40,0001,0527 wire feed hose ID 5,7mm / OD 10mm - PAP

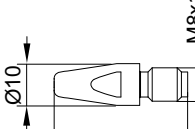
(F)** : max. 4m ext. wire feed hose / 40,0001,0395 wire feed hose ID 5,7mm / OD 9,5mm - KONV

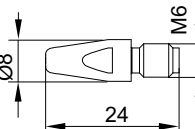
	BasicKit Robacta Drive CMT						Fe /G /W Part No.		CrNi /G /W Part No.	
	Ømm	Øinch	m	feet						
	0,8	.031	5	16.4			44,0350,5301		44,0350,5307	
	0,9	.035	5	16.4			44,0350,5302		44,0350,5308	
	1,0	.039	5	16.4			44,0350,5303		44,0350,5309	
	1,2	.047	5	16.4			44,0350,5304		44,0350,5310	
	1,4	.055	5	16.4			44,0350,5305		44,0350,5311	
1,6	.063	5	16.4			44,0350,5306		44,0350,5312		
				Ømm	Øinch	m	feet	Alu /W Part No.	CuSi /G /W Part No.	Alu /G Part No.
				0,8	.031	10	32.8	44,0350,5319	44,0350,5313	
				0,9	.035	10	32.8	44,0350,5320	44,0350,5314	
				1,0	.039	10	32.8	44,0350,5321	44,0350,5315	
				1,2	.047	10	32.8	44,0350,5322	44,0350,5316	
				1,4	.055	10	32.8	44,0350,5323	44,0350,5317	
				1,6	.063	10	32.8	44,0350,5324	44,0350,5318	

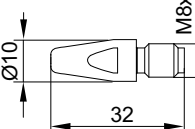


A

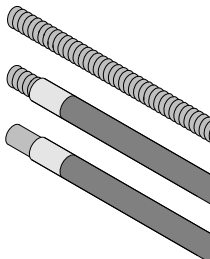
Contact tip M6	Ømm	Øinch	Part No.
	0,8	.030	42,0001,4461,10
	0,9	.035	42,0001,4462,10
	1,0	.040	42,0001,4463,10
	1,1	.043	42,0001,6527,10
	1,2	.045	42,0001,4464,10
	1,3	.051	42,0001,6529,10
	1,4	.052	42,0001,4465,10
	1,5	.059	42,0001,6522,10
	1,6	.062	42,0001,4466,10

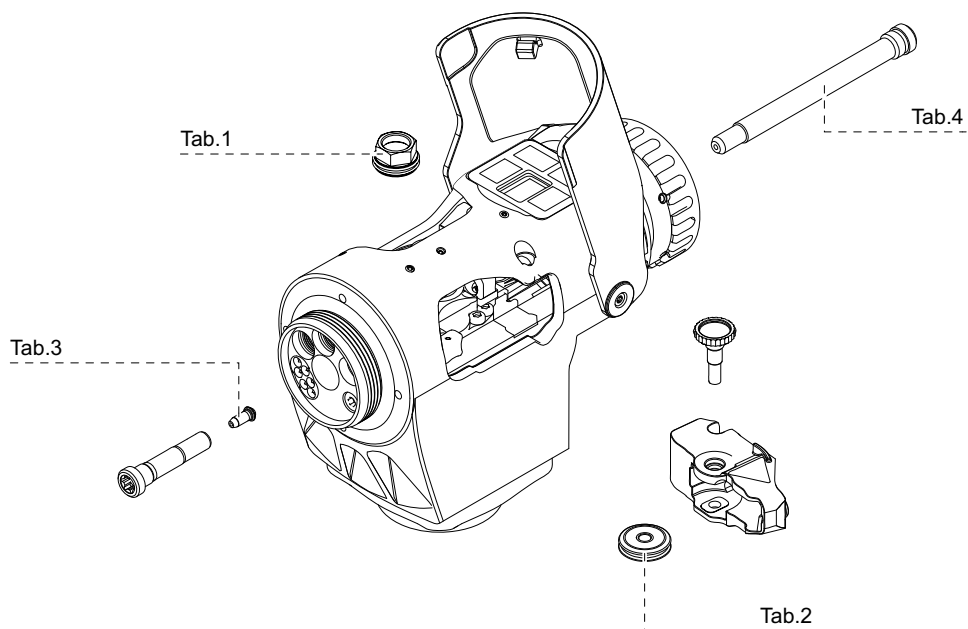
Contact tip M8x1,5	Ømm	Øinch	Part No.
	0,8	.030	42,0001,6464,10
	0,9	.035	42,0001,6465,10
	1,0	.040	42,0001,6466,10
	1,1	.043	42,0001,6183,10
	1,2	.045	42,0001,6467,10
	1,3	.051	42,0001,6184,10
	1,4	.052	42,0001,6468,10
	1,5	.059	42,0001,6485,10
	1,6	.062	42,0001,6469,10

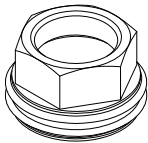
Contact tip M6 ALU	Ømm	Øinch	Part No.
	0,8	.030	42,0001,6525,10
	1,0	.040	42,0001,6526,10
	1,2	.045	42,0001,6528,10
	1,6	.062	42,0001,6523,10


Contact tip M8x1,5 ALU	Ømm	Øinch	Part No.
	0,8	.030	42,0001,6537,10
	1,0	.040	42,0001,4750,10
	1,2	.045	42,0001,4751,10
	1,6	.062	42,0001,4752,10

B

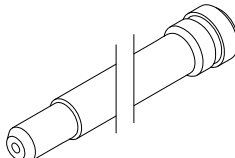
Wire guide insert			Fe	CrNi	Alu /W	CuSi	Alu /G
L = 0,65m (25.6inch)	Ømm	Øinch	Part No.	Part No.	Part No.	Part No.	
	0,8	.031	42,0404,1397	42,0404,1394	X	X	
	0,9	.035	42,0404,1398	42,0404,1395	44,0350,3719	44,0350,3724	
	1,0	.039	42,0404,1398	42,0404,1395	44,0350,3719	44,0350,3724	
	1,2	.047	42,0404,1399	42,0404,1396	44,0350,3720	44,0350,3725	
	1,4	.055	inner liner QC - wire buffer	inner liner QC - wire buffer	44,0350,3721	44,0350,3726	
	1,6	.063	X	X	44,0350,3721	44,0350,3726	



Tab.1	Ømm	Øinch	Part No.
	0,8	.031	42,0001,5733
	0,9	.035	42,0001,5774
	1,0	.039	42,0001,5734
	1,2	.047	42,0001,5735
	1,4	.055	42,0001,5775
	1,6	.063	42,0001,5736

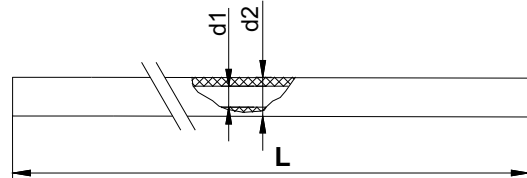
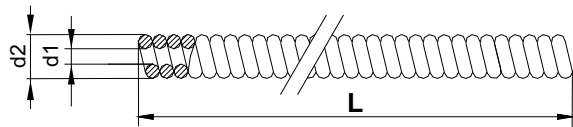
Tab.2	Ømm	Øinch	Part No.
	0,8	.031	42,0001,5732
	0,9	.035	42,0001,5772
	1,0	.039	42,0001,5731
	1,2	.047	42,0001,5730
	1,4	.055	42,0001,5773
	1,6	.063	42,0001,5729

Tab.3	Ømm	Øinch	Part No.
	0,8	.031	42,0405,2053
	0,9	.035	42,0405,2052
	1,0	.039	42,0405,2051
	1,2	.047	42,0405,2050
	1,4	.055	42,0405,2049
	1,6	.063	42,0405,2047

Tab.4 	Ømm	Øinch	Part No.
	0,8	.031	42,0100,1470
	0,9	.035	42,0100,1470
	1,0	.039	42,0100,1470
	1,2	.047	42,0100,1470
	1,4	.055	42,0405,1319
	1,6	.063	42,0405,1319

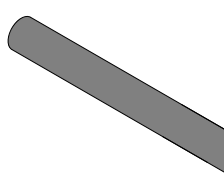
Ⓕ

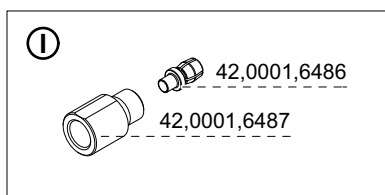
**Inner liner for
Splitbox - wire buffer**



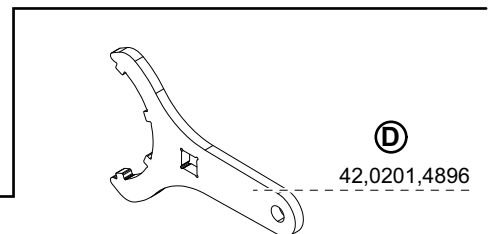
			L		d1		d2		Part No.
	Ømm	Øinch	m	feet	mm	inch	mm	inch	
Fe	0,8 - 1,6	.031 - .063	5	16.4	2,5	.098	4,9	.192	40,0002,0043,005
CrNi	0,8 - 1,6	.031 - .063	5	16.4	2,5	.098	4,9	.192	40,0002,0047,005
Alu /W	0,8 - 1,6	.031 - .063	10	32.8	3,0	.118	4,7	.185	40,0001,0533,010
CuSi Alu /G	0,8 - 1,6	.031 - .063	10	32.8	3,0	.118	4,7	.185	40,0001,0533,010

Ⓖ

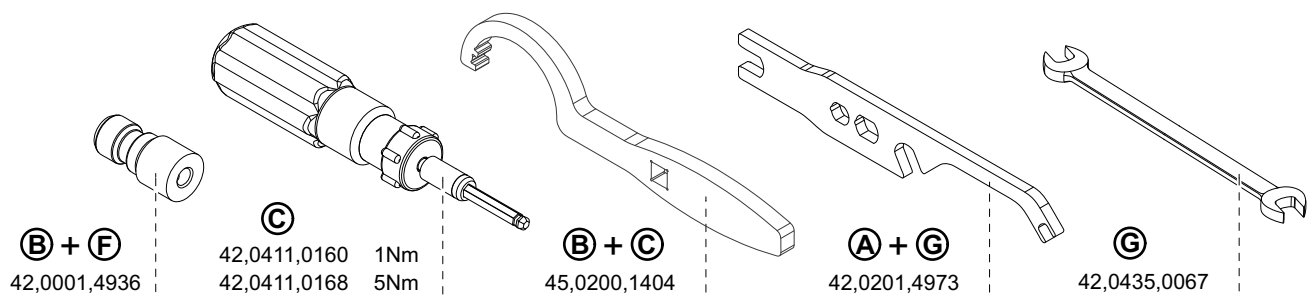
Inner liner for WF Reel - wire buffer			Fe 15m (49.2feet)	CrNi 15m (49.2feet)	Alu /W 10m (32.8feet)	CuSi Alu /G 10m (32.8feet)
	Ømm	Øinch	Part No.	Part No.	Part No.	Part No.
	0,8	.031	40,0002,0041,015	40,0002,0045,015	X	X
	0,9	.035	40,0002,0041,015	40,0002,0045,015	40,0001,0530,010	40,0001,0530,010
	1,0	.039	40,0002,0041,015	40,0002,0045,015	40,0001,0530,010	40,0001,0530,010
	1,2	.047	40,0002,0042,015	40,0002,0046,015	40,0001,0531,010	40,0001,0531,010
	1,4	.055	40,0002,0043,015	40,0002,0047,015	40,0001,0532,010	40,0001,0532,010
	1,6	.063	X	X	40,0001,0532,010	40,0001,0532,010



Ⓖ required Ⓕ



Tools



FRONIUS INTERNATIONAL GMBH

Froniusstraße 1
A-4643 Pettenbach
AUSTRIA
contact@fronius.com
www.fronius.com

Under www.fronius.com/contact you will find the addresses
of all Fronius Sales & Service Partners and locations.



Find your
spareparts online



spareparts.fronius.com