


Essential parameter:

Product name: multi-head space light color series instruction manual
 Input voltage: 100-240V, 50/60Hz
 Light head input: 45W
 Material: aluminum product
 Light-color output: 1600K-20000K + full color
 CRI: >95
 TLCI: >95
 Control: Panel control / DMX console wiring control / DMX console 2.4G wireless control

Battery Use Instructions:

Usage amount: V-port battery 14.70AH * 1
 Power power: 100W
 Battery life: use about 90 minutes at full power
 Support for D-TAP port input

Product mix:

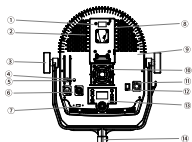

- ① Battery hanging board
- ② Battery hanging pad button
- ③ Light knob
- ④ Wireless indicator light
- ⑤ Antenna
- ⑥ DMX communication interface IN DMX communication interface OUT
- ⑦ USB output 5V/A
- ⑧ X-TAP port input
- ⑨ Control box body
- ⑩ Fan
- ⑪ Power input port
- ⑫ Power main switch
- ⑬ Control panel
- ⑭ Bow

单头彩色太空灯

说明书

Multi-head space light color series instruction manual

THE STAGE LIGHTS

Safety instruction:

- AC power input must be used by ground wire
- Water mist is strictly prohibited from entering the lamps
- Avoid the input voltage exceeding the range of 100-240V
- It is strictly prohibited to use lamps under the ambient temperature have 35°C or exposure to the sun
- Check the tightness of the lamp bow before use to prevent the lamp body from sliding and pressing the hand
- Do not drop metal objects into the power box to prevent accidents.

Light up lamps:



Graph 1

Connect the power line, insert the power plug into the input interface (shown in Figure 1) and rotate to the right, then connect the power AC line to the mains socket and open the switch to light the lamp.

Interface display introduction:



Graph 2

The LCD boot display progress bar, DMX working mode display, battery symbol display, lock screen symbol display, wireless switch symbol display, wireless domain display, wired data receiving symbol display.

There are eight working modes, including:

- CCT mode** (brightness percentage display, color temperature display, red and green display);
- HSI mode** (brightness percentage display, frequency display of color, saturation percentage display);
- XY mode** (brightness percentage display, X coordinate display, Y coordinate display);
- CCT-S mode** (brightness percentage display, color temperature display);
- RGBW mode** (brightness percentage display, red value display, green value display, blue value display, warm color value display);
- SET-C mode** (brightness percentage display, color display);
- LEE mode** (brightness percentage display, color card number display);
- EFFECT mode** (luminance percentage display, mode display, color temperature color frequency display, speed display).

Control key description:

Figure 2 The bottom one is the encoder adjustment knob to adjust the numerical / selection menu options in each mode. Click the knob, press the later lock key in CCT

- The light touch buttons are MENU, UP, DOWN, OK, 1200K, 5600K;
- MENU is the menu key, press and enter the menu selection interface;
- UP, DOWN are the last and next keys to select menu options / select the functions to be operated in CCT / HSI / XY / CCT-S / RGBW / SET-C / LEE / EFFECT mode;
- OK key, which is used to switch mode in CCT / HSI / XY / CCT-S / RGBW / SET-C / LEE / EFFECT mode, like switch from DMX key again to HSI mode in CCT mode and switch to CCT mode in EFFECT mode. The order is CCT→HSI→XY→CCT-S→RGBW→SET-C→LEE→EFFECT→CCT... in the menu option interface, the determination key, and the
- The 1200K and 5600K keys are the color temperature shortcuts.

Model introduction:

Figure 3 is the CCT operation interface with DIM, CCT and CUR adjusted in CCT mode;

- The adjustment range of DIM is 0-100, step 1;
- The adjustment range of CCT is 2600-6000, step 100;
- The regulation range of CUR is 0-1.0 and step 0.1.



Graph 3

Figure 4 is the HSI operation interface, with the DIM, HUE, and SAT adjustable in the HSI mode;

- The adjustment range of DIM is 0-100, step 1;
- The adjustment range of HUE is 0-359, step 1;
- The regulatory range of the SAT is 0-100, with step 1.



Graph 4

Figure 5 is the operation interface of X-Y, which can adjust DIM, X and Y in X-Y mode;

- The adjustment range of DIM is 0-100, step 1;
- The adjustment range of X is 0-0.80, and the step is 0.01;
- The adjustment range of Y is 0-0.80 and step 0.01.



Graph 5

Figure 6 is the CCT-S operation interface, which is able to regulate DIM, CCT in CCT-S mode;

- The adjustment range of DIM is 0-100, step 1;
- The regulation range of CCT is 1600-2600, step 100, 6000-10000, step 900, 10000-30000, step 1000.



Graph 6

Figure 7 is the RGBW operation interface that can adjust DIM, R, G, B, W in RGBW mode;

- The adjustment range of DIM is 0-100, step 1;
- The adjustment range of R is 0-255, step 1;
- The adjustment range of G is 0-255, step forward;
- The adjustment range of B is 0-255, step forward;
- The adjustment range of W is 0-255, and step 1.



Graph 7

Figure 8 is the SET-C operation interface that adjusting DIM and COLOR in SET-C mode;

- The adjustment range of DIM is 0-100, step 1;
- The adjusted colors of COLOR are 1200K, 5600K, red, orange, yellow, green, indigo, blue, purple.



Graph 8

FIG. 9 is an LEE operation interface for adjusting DIM and LEE in LEE mode;

- The adjustment range of DIM is 0-100, step 1;
- The LEE is a color card number, and there are following 132 adjustable color cards, as shown in FIG. 10.



Graph 9

2, 3, 4, 7, 8, 9, 10, 13, 15, 19, 20, 21, 22, 24, 26, 27, 35, 36, 46, 48, 52, 53, 58, 61, 63, 68, 79, 85, 89, 90, 101, 102, 103, 104, 105, 106, 107, 109, 110, 111, 113, 115, 116, 117, 118, 119, 120, 121, 122, 124, 126, 127, 128, 129, 130, 132, 134, 135, 136, 137, 138, 139, 141, 142, 143, 144, 147, 148, 151, 152, 153, 154, 156, 157, 158, 159, 161, 162, 164, 165, 166, 170, 174, 176, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 192, 193, 194, 195, 196, 197, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 218, 219, 223, 226, 230, 232, 236, 237, 238, 241, 242, 243, 244, 245, 246, 247, 248, 249, 278, 279, 281, 285, 298, 299, 328, 332, 343, 344, 353, 354, 363, 364, 441, 442, 443, 444;

Graph 10

FIG. 11 is the EFFECT operation interface, which can adjust DIM, effect mode, CCT / HUE, SPEED;



Graph 11

There are 16 effect modes, namely Welding, TC-Jump, RGB-Jump, Paparazzi, TC-Cycle, RGB-Cycle, Storm, TC-Flash, RGB-Flash, TV, Bad Bulb, Pappy, Fire, Cop Car, CCT Pulse, RGB Pulse; The adjustment range of DIM is 0-100, step 1;

- The adjustment range of CCT is 2600-6000, step 1;
- The adjustment range of HUE is 0-359, step 1;
- The SPEED regulation range is 1-30, with step 1.

